



Disc Platform Scale EF097 / EF098  
User Manual

Features

- ✧ Capacity: 5000g / 11lb:0.4oz / 5000ml
- ✧ Division: 1g / 1ml / 0.1oz
- ✧ Weight unit: g /oz/ lb'oz / ml
- ✧ Minimal weight: 2g
- ✧ Function key:  $\frac{On/Off}{ZERO}$  ,  $\frac{g}{lb'oz}$
- ✧ Display: LCD with white backlight
- ✧ Battery: 2xAAA
- ✧ Dimension: 180x180x57mm
- ✧ Auto off function

LCD display



Symbol	Description
	Negative weight
TARE	Tare function
	LOW battery

Function indication

- ✧  $\frac{On/Off}{ZERO}$  : Press " $\frac{On/Off}{ZERO}$ " to switch on to enter weighing mode;  
  
Press and hold " $\frac{On/Off}{ZERO}$ " for about 2s to switch off;  
  
Press " $\frac{On/Off}{ZERO}$ " to make tare function in weighing mode.
- ✧  $\frac{ml}{lb'oz}$  : Press " $\frac{ml}{lb'oz}$ " to select desired unit in weighing mode;

Operation instruction

I. Select unit before use

- Open the battery door at the back of the scale.
- Put the batteries in and ensure +/- terminals are correct. The LCD will be on as below.




- Close the battery door and put the scale on flat table. The scale will enter weighing mode automatically.



**Note:** If there is a weight shown on the LCD, please press " $\frac{On/Off}{ZERO}$ " to set it to zero.

- Press " $\frac{ml}{lb'oz}$ " to select desired unit.

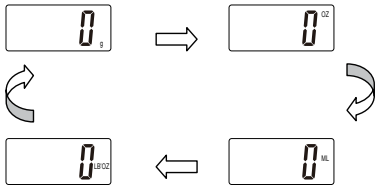

**Note:** When finishing selecting unit, you may start to weigh according to the weighing procedure below. If there is not any operation and the weight is steady in weighing mode, the scale will turn off automatically after about 45 seconds.

II. Weighing (unit g selected)

- Please put the scale on hard flat table.
- Press " $\frac{On/Off}{ZERO}$ " to switch on.



- You can start to weigh when "0" is shown on the LCD.

Indication message

- Low battery indication. When "" is shown, please replace the batteries.



- Overload indication. Please remove the weight on the scale to protect the loadcells.



- Negative weight indication. It will be shown when taking the weight from the platform, under "Tare" setting.



Reminder

- Please do not put the scale on carpet.
- Please put the weight object in the center of the scale platform to obtain a more accurate weight.
- Please do not put items on platform when switch on.
- If the scale is not being used for a long period, please remove the batteries.
- Clean the scale with a slightly damp cloth, DO NOT immerse the scale in water or use chemical/abrasive cleaning agents.
- To maximize battery life touch " $\frac{On/Off}{ZERO}$ " for two seconds after use to switch off .